



Nothing like Anything



X368
User Guide

User Guide

Welcome

Thank you for purchasing the Micromax X368 mobile phone. You are now the proud owner of the X368 which offers you these exciting features:

- Dual SIM Support
- T-Flash card support (up to 8 GB)
- 2 MP Camera
- Music Player
- FM Radio with recording
- Video and sound recording
- Call recording with automatic feature
- Melody Composer
- Bluetooth/WAP
- Blacklist and Whitelist
- Java Opera Mini, Newshunt, Games
- MRE (Facebook lite and Yahoo applications)

To obtain the best performance of your phone and to know its full range of features, please read this user guide carefully.

Table of Contents

User Guide

1 Know Your Phone..... 1

- 1.1 Phone Layout 1
- 1.2 Keys and Parts 2
- 1.3 Icons and Indicators 3

2 Getting Started..... 5

- 2.1 Remove/Insert Battery 5
- 2.2 Insert SIM Card 6
- 2.3 Insert Memory Card 7
- 2.4 Charge the Battery 8

3 Basic Operations..... 11

- 3.1 Switch Phone ON/OFF 11
- 3.2 Lock/Unlock the phone 11
- 3.3 Accessing Menus 11
- 3.4 Make a Call 12
- 3.5 Answer a Call 12
- 3.6 Reject a Call 12
- 3.7 Mute a Call 13
- 3.8 Hold a Call Conference 13
- 3.9 Swap a Call 13

4 Phonebook..... 14

- 4.1 Add New Contact 14
- 4.2 View Contacts 15
- 4.3 Search for a Contact 15

- 4.4 Send Message 16

- 4.5 Edit a Contact 16

- 4.6 Delete a Contact 16

- 4.7 Copy a Contact 16

- 4.8 Move a Contact 17

- 4.9 Send Business Card 17

- 4.10 Blacklist a Contact 17

- 4.11 Whitelist a Contact 17

- 4.12 Export vCard 18

- 4.13 Mark Multiple Contacts 18

- 4.14 Export and Import 18

- 4.15 Phonebook Settings 19

5 Messaging..... 20

- 5.1 Write a Message 20

- 5.2 Read a Message 21

- 5.3 Delete Messages 22

- 5.4 Email Messages 22

- 5.5 Broadcast Messages 22

- 5.6 Using Message Templates 23

- 5.7 Message Settings 23

6 Multimedia 25

- 6.1 Take Photos 25

- 6.2 Edit Photos 26

User Guide

6.3	View Images.....	26	10.1	Startup SIM Preference.....	37
6.4	Play Videos.....	27	10.2	Set Reception Mode	37
6.5	Edit Photos.....	27	10.3	Perform Phone Settings	38
6.6	Record Sounds.....	28	10.4	Call Settings.....	39
6.7	Listen to FM Radio	28	10.5	Auto-record Conversations....	41
6.8	Melody Composer	29	10.6	Network Settings.....	41
6.9	View Images/Photos as a Slide Show	30	10.7	Security Settings	41
7	File Manager.....	31	10.8	Restore Factory Settings	42
7.1	Format Card/Phone Memory	32	11	Listen to Music	43
7.2	Send Files.....	32	11.1	Set Music as Ringtone	43
8	Applications	33	12	User Profiles	44
8.1	Java Applications:.....	34	12.1	Set User Profiles	44
8.2	Fun and Games	34	13	Connecting to Networks and Devices	45
8.3	Access web Pages via Opera Mini	34	13.1	Access Network Services.....	45
9	Organizer	35	13.2	WAP Services and Settings ..	45
9.1	Back up your Data.....	35	13.3	Select Profile	45
9.2	View Calendar.....	35	13.4	Enable/Disable Bluetooth	46
9.3	Schedule Tasks	35	14	Using the PC Suite	47
9.4	Schedule Alarm	36	14.1	Requirements.....	47
9.5	Synchronize Your Accounts...	36	14.2	Install the Driver.....	47
9.6	Synchronize Phones.....	36	15	Health and Safety Information	51
10	Settings	37	16	Taking Care of Your Device ..	53

1 Know Your Phone

1.1 Phone Layout



User Guide

1.2 Keys and Parts

Some of the important keys and parts are listed here to help you use the phone better.

SN	Keys	Function Description
1	Receiver	Listen to the voice of the other side when calling.
2	LCD Screen	Displays the interface you are working on.
3	Navigation keys	Left navigation key (L): moving to the left; in the standby screen, press to navigate through the shortcut icons.
		Right navigation key (R): moving to the right; in standby screen, press to navigate through the shortcut icons and press OK to open shortcut.
		Up navigation key (U): moving upward; short press during a call to turn up the volume; in the standby screen, press to enter Music.
		Down navigation key (D): moving downward; short press during a call to turn down the volume; in the standby screen, press to write message.
4	OK key	OK; short press in the standby screen to enter the currently highlighted shortcut. Long press for Facebook, MRE.
5	Menu Left key	Performs functions in lower left display; Enter main menu in standby mode.

User Guide

6	Menu Right key	Performs functions in lower right display; Enter Contacts interface in standby mode.
7	Call key	In dialing mode, press Call key to make the call; answering incoming calls.
8	End key	End a call; reject an incoming call; go back to standby screen; long press to switch on/off the phone.
9	Number Keys	In standby screen, long press 2-9 key to speed dial out (need setting). In radio mode, press 1-9 to access the existing channels.
10	* key	Press left key then * key to lock/unlock the keypads. Short press * key to enter the symbol choosing screen; quick press * key repeatedly in dial screen to input +, p, w.
11	# Key	Long press # key to activate silent mode; in editing mode, short press # key to switch input method.
12	Camera lens	To shoot photos or videos

1.3 Icons and Indicators

Icons	Indicators	Icons	Indicators
-------	------------	-------	------------

User Guide

	Signal strength for SIM 1		Alarm has been set
	Signal strength for SIM 2		Call Divert Unconditionally
	The current alert type is ring only		Java network is connected
	The current alert type is vibration		Battery level
	The current alert type is vibration and ring		New missed calls
	The current alert type is vibration then ring		Keypad locked
	The current alert type is silent		The headset is being used
	Bluetooth is on		GPRS is connected


2 Getting Started

2.1 Remove/Insert Battery


You may need to remove the battery to insert SIM cards, Memory card or for replacing the battery.

To remove the battery:

1. Invert the back of the mobile phone upward and take off the rear cover according to the figure below.

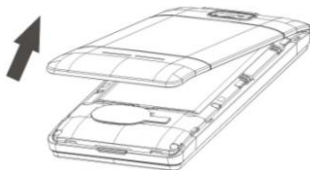

2. Take out the battery as shown in the following figure.

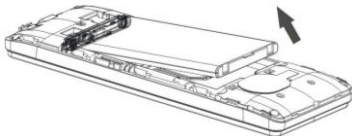


3. Finally place back the rear cover of the mobile phone after removing/inserting the battery as required.

Note: *When inserting the battery, ensure that the metal teeth at the top of the battery comes in contact with the corresponding metal slots of the mobile phone. After this, press the battery down to insert the battery in place.*

2.2 Insert SIM Card

The X368 is a Dual SIM mobile phone allowing you to use two SIM Cards. To insert SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) as shown below.

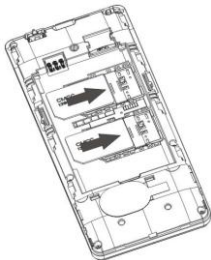


3. Finally, insert the battery and replace the rear cover of the mobile phone.

2.3 Insert Memory Card

To insert the memory card:

1. Switch off the phone and remove the rear cover and the battery.
2. Open the memory card slot, and insert the memory card into the slot.

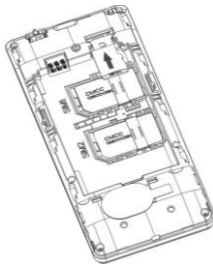

3. Close the memory card slot.
4. Finally, insert the battery and the rear cover of the mobile phone.

Recommendation: Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.


2.4 Charge the Battery

You can charge your battery via the charger or the USB cable supplied with this phone.

User Guide

2.4.1 Charging via Power Socket

1. Connect the charger to the charger jack on the phone.
2. Connect the charger to a power socket. The charging starts, with the charging icon displayed in an animated state.

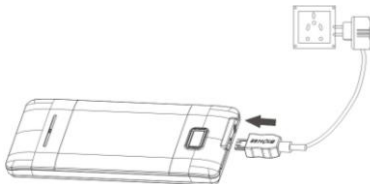

3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone after charging.

2.4.2 Charge via USB Cable

1. Connect the USB cable to the charger socket on the phone.



User Guide

2. Next, connect the USB jack of the cable with the PC or laptop. The charging starts, with the charging icon in an animated state.
3. Disconnect the USB cable from the PC/Laptop and the phone after charging.

Note: *Slight heating during charging is normal. When the charging icon becomes static, it indicates that the battery is full*

3 Basic Operations

3.1 Switch Phone ON/OFF

- To switch ON your phone, press and hold the **Power key** for a few seconds.
- To turn OFF your phone, press and hold down the **Power key** for a few seconds.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.) If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock it. Contact your network provider for the PIN and PUK code.

3.2 Lock/Unblock the phone

To lock or unlock the phone, press the **Left** key and then the * key.

3.3 Accessing Menus

- In standby mode, press the **Left** key once. Unlock the keypad if necessary to access the menu.
- Press the **Left** or **Right** navigation keys to access the menu item; press the **OK** key to choose the highlighted item.

- Go to **Menu > Settings> Phone Settings> Display Setup** to change your menu style.

3.4 Make a Call

You can make a call in any of the following ways:

- Enter the desired number in standby mode and press the **Call key**.
- Go to **Menu> Phonebook** and then select and dial the desired number.
- Go to **Menu> Call Logs** to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

3.5 Answer a Call

Press the **Answer** key, or select **Options > Answer** to answer a call

3.6 Reject a Call

Press the **End** key to reject an incoming call. Or press the **Right** key to reject the call.

3.7 Mute a Call

Go to **Options > Mute > On/Off** while a call is active.

3.8 Hold a Call Conference

You can talk with more than one person at the same time through call conference.

1. While on a call, go to phonebook and dial a contact. Once the new call gets connected, the first call will be put on hold.
2. After this, press **Options** and then choose **Conference**.

Note: This is network dependent and you may need to contact your network operator for this.

3.9 Swap a Call

1. While on a call, go to phonebook and dial a contact. Once the call gets connected, the first call will be put on hold.
2. After this, press **Options** and then choose **Swap**. The active call and the call on hold will be swapped.

4 Phonebook

Your phonebook stores all your saved contacts for anytime access. Your phonebook data can be stored in your SIM card or your phone memory. You can access your phonebook by going to:

Menu > Phonebook

You can press the right and left navigation keys to access the phonebook tabs which shows you:

- **All List** (Phone and SIM 1/SIM 2): All contacts existing in phone and SIM Card(s).
- **Phone List** (Phone memory): Contacts existing in phone memory.
- **SIM 1 List**: Contacts existing in SIM 1 memory.
- **SIM 2 List**: Contacts existing in SIM 2 memory.
- **Caller Groups**: Add contacts to a group to send messages or set ringtones and other facilities.

Note: Use the **Left** and **Right** navigation keys to access the above phonebook tabs.

4.1 Add New Contact

You can add new contacts to the Phone List, SIM 1, SIM 2.

Menu > Phonebook

To add a new contact:

1. Select **Menu> Phonebook** and navigate to the desired contact list (Phone memory, SIM 1, SIM 2) using

the Left and Right navigation keys.

2. Right press the **Up** arrow key once. Then press the **OK** key.
3. Select any of the SIMs, or phone memory for saving the contact.
4. Enter the contact name and then press the **Down** key and enter the number.
5. Press the keys as suggested and save the contact.

***TIP:** You can save a number from the Call logs by highlighting the number and selecting **Options**.*

4.2 View Contacts

Menu > Phonebook

You can highlight the desired contact using the Up/Down navigation keys and then press the **OK** Key to view the details.

4.3 Search for a Contact

To search for a contact:

Menu > Phonebook and then type in the first few letters of the contact name in the search bar.

4.4 Send Message

Menu > Phonebook

On the highlighted number, press **Options** and then select **Send message**.

4.5 Edit a Contact

Menu > Phonebook > Options > Edit

Allows you to search for and edit a highlighted contact.

4.6 Delete a Contact

Menu > Phonebook > Options > Delete

Allows you to search for and delete a highlighted contact.

4.7 Copy a Contact

Menu> Phonebook> Options> Copy

You can copy all entries stored in the SIM card to the phone memory SIM or save as a file.

4.8 Move a Contact

Menu > Phonebook > Options > Move

Move contacts from Phone to SIM 1 or SIM 2.

4.9 Send Business Card

Menu > Phonebook > Options > Send vCard

Allows you to send business card via SMS, MMS, email or Bluetooth to other contacts.

4.10 Blacklist a Contact

Menu > Phonebook > Options > Add to Blacklist

Allows you to block the currently highlighted contact.

4.11 Whitelist a Contact

Menu > Phonebook > Options > Add to Whitelist

Allows you to create an exclusive list who will be able to make calls to you.

4.12 Export vCard

Menu > Phonebook > Options > vCard Export

Allows you to export your business card.

4.13 Mark Multiple Contacts

Menu > Phonebook > Options > Multi Operation

Allows you to mark single or several contacts to:

- Send SMS
- Send vCard
- Delete/copy or move marked
- Mark/unmark

4.14 Export and Import

Menu > Phonebook > Options > Export and Import

Allows export or import of phonebook contacts. Also allows you to import or export your business card.

4.15 Phonebook Settings

Menu > Phonebook> Options> Phonebook settings

The phonebook settings provide the following options:

- **Speed Dial:** Assign speed dial to desired numbers or activate/deactivate speed dial.
- **My vCard:** Add my business card information for sending to desired contacts via SMS, MMS or via bluetooth.
- **Extra Numbers:** Add owner, fixed dial or service numbers.
- **Memory Status:** Check the memory status of the SIM 1 and Phone.
- **Copy All Contacts:** Allows you copy all the contacts from phone to SIM 1 or vice versa.
- **Move All Contacts:** Move all contacts from Phone to SIM or vice versa.
- **Delete All Contacts:** Delete all contacts from phone or SIM.

5 Messaging

In addition to the usual messaging the X368 provides you the features to also send flash message, Email or even broadcast messages.

5.1 Write a Message

Menu > Messages > Write message

Allows you to compose SMS or MMS. Pressing **Left** key during/after writing the message gives you these options:

- **Send to:** Send the message directly.
- **Insert Symbol:** Insert symbols to your SMS
- **Input method:** You can choose the **text** input method.
- **Edit Options:** Allows you to mark, cut or copy text.
- **Add Picture/Sound/Video/Subject:** Add picture, sound, videos, subject to your message.
- **Slide Options:** Add slides in various ways to your MMS.
- **Switch to MMS:** Switch to MMS mode.
- **Advanced:** You can insert text, attachment, contact number name, bookmark etc to your SMS.
- **Save to Drafts:** Save your message in drafts folder for sending later.
- **Details:** See the details of your SMS.

5.2 Read a Message

Menu > Messages > Inbox

Allows you to read your received messages.

To read a message, highlight the desired message in the inbox and press **OK**.

While highlighting a message, you can go to **Options** and forward, delete, sort, mark for deletion or copy, move or copy to phone or view details.

While reading a message, you can select **Left** key to access the following.

- Reply , Call sender, forward, delete
- **Add to Calendar:** Add the message to calendar as reminder.
- **Advanced:** You can do the following under advanced:
 - Use number, Use URL, email, USSD
 - Copy/move to SIM
- **Edit options:** Mark text or copy all
- **Details:** View message details

Note: USSD allows you to access menu and/or response based services from the network provider.

Important: If you have enabled conversations in **Menu> Messages> Message Settings>Conversations** then, instead of **Inbox** folder, **Conversations** folder will appear.

Similarly, you can read Draft, outbox and sent messages.

5.3 Delete Messages

Menu > Messages > Delete messages

Allows you to delete your messages in from your Inbox, Outbox, Drafts, Sent messages or all your messages.

5.4 Email Messages

Menu > Messages > Email

You need to configure your email account to use this feature. If you have not yet have configured your account, follow the screens that appear for account configuration. Once you configure your account, you can send or receive emails on your phone.

5.5 Broadcast Messages

Broadcast message is an information service to all GSM users in a specific location sent by the network operator, such as weather forecast, transportation conditions and so on. You can access this feature via:

Menu > Messages > Broadcast message

You have the following options under this feature:

- **Receive mode:** Choose whether to enable or disable cell broadcast.
- **Channel Settings:** Set the channel of cell broadcast.
- **Language:** Choose the display language of cell broadcast.
- **Read Message:** Read the received message broadcast by the service provider.

5.6 Using Message Templates

Menu > Messages> Templates

Use preset SMS or MMS templates in your messages. These preset templates can save you time if the theme of your new message is the same as those existing in the template.

5.7 Message Settings

Menu>Messages> Settings

You can set your SMS and MMS, service message and conversation preferences using this feature.

SMS Settings:

- **Text Message:** For text message, you can do message settings for your SIM cards including SMS Blacklist, SMS Backup, and also view memory status.
- **Multimedia Message:** For MMS, you can set the data account via **Select profile**. You can also set the following **MMS** settings such as:
 - **Compose**
 - **Sending**
 - **Retrieval**
 - **Memory Status**

User Guide

- **Service Message::** You can configure service message such as:
 - **Enable Push:** Accept all service messages, or with condition or disable all service messages.
 - **Enable Service Loading:** Prompt, auto launch or disable when service messages arrive.
 - **Enable Auto Answer:** Enable the phone to accept calls automatically from only a list of numbers in the auto-answer list.
- **Conversations:** Activate or de-activate message conversation threads in the inbox messages.

6 Multimedia

6.1 Take Photos

Menu > Multimedia > Camcorder

You can take good quality videos with your X368 Mobile phone. You have the following options under your video recorder. Use the **Up** and **Down** keys to navigate through these options. Use the **Left** and **Right** keys to choose the settings under these options.

- **EV:** Exposure value of the camera.
- **Switch To:** Switch to image viewer or video recorder.
- **Capture Mode:** Choose the capture modes available for taking your videos.
- **Scene Mode:** Choose the scene mode for the video from the available modes.
- **Image Size:** Choose the image size.
- **Face Detection:** Enable or disable face detection.
- **Self Timer:** Use the timer for taking photos.
- **White balance:** Set the white balance of the camera.
- **Effects:** Choose the effects for your camera
- **Adv. Setting:** Advanced settings such as Storage, image quality, timestamp, shutter sound, banding, restoration to default settings.

6.2 Edit Photos

Menu > Multimedia > Photo Editor

You have the following options to edit your photos.

- **Photo Artist:** You can edit existing or just captured photos.
- **Image Tiles:** Tile your images based on available options.

6.3 View Images

Menu > Multimedia > Image viewer

Note: If no images are displayed despite inserting the memory card with images, then go to Options→Storage and then choose the memory card

When you highlight an image, you have the following features:

- **View:** You can select this to view the current picture.
- **Edit:** Edit the picture
- **Browse style:** Set the picture browse style such as list or matrix mode.
- **Send:** Send the picture as MMS or via Email/Bluetooth.
- **Use As :** Use the picture as wallpaper, screen saver or caller picture.
- **Rename:** Rename the current picture.
- **Delete:** Delete the current picture.

- **Sort by:** Sort the images by name, type, time or size.
- **Delete all files:** Delete all the pictures in the image viewer.
- **Storage:** Set the storage location as memory card or phone.

6.4 Play Videos

Menu > Multimedia > Video Player

When you highlight a video, you have the following options:

- **Play:** Play the video file.
- **Add:** Add video files to the list
- **Remove/Remove All:** Remove video files from the list
- **Settings:** Set preference such as playlist is displayed from memory card or the list is generated automatically
- **Streaming URL:** Provide a URL from where streaming vide will be displayed.
- **Network profiles:** Set your network profile.

6.5 Edit Photos

Menu > Multimedia > Photo Editor

You have the following options to edit your photos.

- **Photo Artist:** You can edit existing or just captured photos.

- **Image Tiles:** Tile your images based on available options.

6.6 Record Sounds

Menu > Multimedia > Sound Recorder

You can record sounds with your mobile phone. On the Sound Recorder list screen, you can select

- **New Record:** Begin recording new sounds from your phone.
- **List:** List all the recorded files.
- **Settings:** Set some relevant parameters for the sound recorder.

6.7 Listen to FM Radio

Menu > Multimedia > FM Radio

Your phone comes with an FM Radio which lets you listen to various FM channels.

Options > Channel List

List all the current saved channels. You can enter channel list, edit it and display the searched channel list.

Options > Manual Tuning

Input the desired broadcasting channel manually.

Options > Auto search

Automatically search FM and setup.

Options > Settings

Select the Radio background play and toggle loudspeaker.

Options > Record

Record your ongoing program.

Options > Append

Append your current recording with a previous recording to create a combined recording.

Options > File List

View the existing list of recordings

To Increase/Decrease the volume:

Press the * key to decrease the volume. Press the # key increase the volume.

To switch between channels:

Press the number keys on your keypad according to the channel numbers.

To Stop the Radio:

Press the **OK** key to start or stop the radio.

6.8 Melody Composer

Menu > Multimedia > Melody Composer

You can compose your own music using this feature. Go to **Options>** and you can:

- Play, Edit, Add, rename, delete saved melodies, or send your melody as multimedia, email or via

bluetooth.

- While adding, press the number keys to compose your tunes for the music.
- Press the **Clear** key to undo your tunes.
- Set play speed, select instrument to play your composed melody.

Note: Key "8" is the vibrating key. Press it to add vibration to your tunes.

6.9 View Images/Photos as a Slide Show

Menu > Multimedia > Slide Show

You can select your image folder or photos folder from the phone or memory card and play them as slide shows.

Note: You need to choose **Options> Select** at the folder level and choose **Play** to view the slide show.

7 File Manager

Menu > File Manager

The file manager allows you to view and manage your files stored in the Phone or memory card.

Menu > File Manager> Options

At the memory card or Phone memory level, pressing Left key allows you to:

- **Open:** Open the current file or folder.
- **Format:** Format the selected memory.
- **Rename:** Rename the highlighted file. (Applicable to memory card)
- **Details:** View the details of the memory (Applicable to memory card).

When you open a file, depending on the folder content, pressing the left key allows you to view, edit, rename, or delete the file. In addition, you have these options:

- **Send:** Send via Bluetooth.
- **Use as:** Use the file according to the given option.
- **New Folder:** Create a new folder
- **Rename:** Rename the current folder
- **Delete:** Delete the current file.
- **Sort by:** Sort the file by the options listed.
- **Mark Several:** Delete, move or copy marked files.

- **Copy:** Copy the current file from current location to another location (phone or memory card).
- **Move:** Move the current file from current location to another location (phone or memory card).
- **Delete all files:** Delete all the files from the current folder.
- **Details:** View details of the current file.

Use the left or right keys to access the phone or memory card while browsing through files in file manager.

7.1 Format Card/Phone Memory

Menu > File Manager> Card/Phone Memory

After this, press the Left key to format the card or phone memory.

7.2 Send Files

Menu > File Manager> Card/Phone Memory

After this, highlight or open the file and press the **Left** key. Next, choose **Send** to send the file via SMS, Email or Bluetooth.

8 Applications

Menu > Applications

The X368 provides you the following applications:

Access Java applications and Tetris. You can also do your settings and default security settings.

- **MRE:** Facebook Lite and Yahoo applications allows you to access services ranging from mobile games and multimedia entertainment to up-to-date stock market information and much more. For more information, contact your service provider.
- **Java Applications:** You can enjoy applications like Newshunt, Yahoo ODP, Facebook, Ebuddy, NFS (Need for speed) Tetris, and Blackshark..
- **Fun & Games:** You can play preloaded games or perform game settings from this menu.
- **Calculator:** Use the calculator for performing calculations.
- **Stopwatch:** Use the stopwatch to count time elapsed and also view previously recorded counts.
- **Text Reader:** Allows you to read files with *.txt* extension.
- **Notes:** Add Notes in various encoding formats.
- **Unit Converter:** helps you to convert units from one system to another.
- **Currency Converter:** Converts values from one currency to another based on rates you enter.
- **Answer Machine:** Activate/deactivate auto-answering message and settings on your phone.

8.1 Java Applications:

Menu > Application> Java Applications

- **Opera Mini:** Lets you browse Internet at fast speeds.
- **Newshunt:** Lets you access news services.
- **Tetris:** Play the famed Tetris game
- **Blackshark:** Play the blackshark game

8.2 Fun and Games

Menu > Application> Fun & Games

You can play preloaded games or perform game settings from this menu.

8.3 Access web Pages via Opera Mini 4

Menu > Application> Java Applications> Java> Opera Mini 4

Opera Mini is a web browser designed primarily for mobile phone users. It helps in connecting faster to the internet and makes browsing easy and quick.

9 Organizer

Menu > Organizer

Your phone provides you with the capability to organize your files, routines and tasks.

9.1 Back up your Data

Menu > Organizer> T-Flash Backup

Allows you to back up/export your data such as phonebook/vCard to the memory card and also do settings for the file export format to txt or CSV. SMS backup is also available under this feature.

9.2 View Calendar

Menu > Organizer> Calendar

Allows you to view the Calendar and go to particular dates. Pressing Left key while viewing the Calendar allows you to:

- You can add events, Jump to particular date
- Go to today, toggle between Weekly or Daily view

9.3 Schedule Tasks

Menu > Organizer> Tasks

Lets you **s**chedule tasks on desired dates with alarm, priority, periodicity etc.

9.4 Schedule Alarm

Menu > Organizer> Alarm

Lets you **s**chedule multiple alarms with the desired settings. Other features available in the organizer includes:

- **Calendar:** Allows you to view the Calendar and go to particular dates.
- **World Clock:** View the time zones of major cities using the navigation keys.

9.5 Synchronize Your Accounts

Menu > Organizer> Synchronization

Allows you to synchronize Phonebook, Calendar and Tasks/To Do List etc with your Email account, or synchronization service such as www.o-sync.com, and your phone. Your phone should have GPRS/Live activated or should be connected to internet using wireless connection to use this service.

9.6 Synchronize Phones

Menu > Organizer> Phone Sync

Phone sync is the synchronization between two cell phones. The synchronization is done via Bluetooth. You can synchronize your Phonebooks with this feature.

10 Settings

Menu > Settings

You can perform various settings for your mobile phone using this feature.

10.1 Startup SIM Preference

Menu > Settings> Power on SIM Status

On starting your phone, the Power on SIM status allows you to freshly choose the SIMs to be active on your phone (Select with SIM) or continue with the previous choice (Use Default).

10.2 Set Reception Mode

Menu > Settings> Reception Mode

With this feature, you can change the SIM status and reception mode such as dual SIM 1ctive, Single SIM 1ctive or choose flight mode.

10.3 Perform Phone Settings

Menu > Settings> Phone Settings

You have a host of useful phone settings that allows you to tune your phone with your changing requirements:

- **Time and date:** Lets you set the time and date on the phone.
- **Schedule power on/off:** Lets you set a particular time on the phone when the phone should Power on/off itself.
- **Language:** The Micromax X368 currently supports Hindi and English.
- **Input method:** This enables you to select the text input methods.
- **Font:** Choose the font style
- **Shortcuts:** Set shortcuts for FM Radio, Alarm, Bluetooth, Calendar inbox. You can add, enable or disable, or change the order of shortcuts. Your shortcuts will appear on the main screen in standby mode. Use the Left and Right Keys to navigate through the menus.
- **Display Setup:** You can set a host of different characteristics of the phone such as:
 - **Wallpaper:** Set your favorite wallpaper on the phone.
 - **Screen saver:** Lets you set an image as a screen saver.
 - **LCD Backlight:** Set parameters for the LCD backlight
 - **Main Menu Effect:** Set the main menu effect.
 - **Main Menu Switch:** Change the appearance of the main menu. There are three styles listed under this setting. Choosing any of the styles changes the way icons appear in the main menu.

User Guide

- **Show date and time** : Enables you to see the date and time on the idle screen.
- **Show Operator Name**: Shows operator or network name.
- **Show Owner Number**: Shows your number
- **Greeting text**: You can set greeting text status and greeting text content
- **Dedicated Key**: This option helps you dedicate/map certain features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime, you can change the mapping and select a new feature from the following features available
- **Auto Update Time**: Activates/.deactivates or confirms auto update of date and time on your phone
- **Font Size**: Set the font size appearing of the phone
- **UART Setup**: This option can be activated for either SIM1 or SIM2. With this option, you can choose the access of PC software to SIM1 and SIM2.
- **Setup Wizard**: Allows you to set language, home city, input method.

10.4 Call Settings

Menu > Settings> Call Settings> SIM 1/SIM 2 Call Settings

You have the following options under call settings:

- **SIM 1/SIM 2 Call Settings**: Set the call settings for the selected SIM.
 - **Caller ID**: You can chose to hide/show your caller ID or as configured by your network

User Guide

- **Call Waiting:** You can choose to activate or deactivate the call waiting facility. If active, incoming calls during another active call will be put on wait.
- **Call Divert:** Provides you with various call divert options. With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.
- **Call Barring:** This is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings or restrict calls, please contact your network operator to obtain the password for opening this service.
- **Line Switching:** Allows you to switch between line 1 and line 2 for your outgoing and incoming calls.
- **Advance Settings:**
 - **Blacklist:** Add the number to a blacklist to block the person's calls. Blacklist a single or list of up to 20 contacts. Also allows you to activate or deactivate blacklist mode.
 - **Whitelist:** Allow only the numbers added in this list to be able to contact you.
 - **Auto Redial:** Activate or deactivate auto-redial
 - **Call Time Display:** Activate or deactivate call time display on the phone
 - **Call Time Reminder:** Activate or deactivate call time reminder. This can be on a single or periodic basis.
 - **Auto Quick End:** This option enables you to set a specific time after which the call will be terminated automatically.
 - **Reject by SMS:** Reject calls with SMS

- **Connect Notice:** Enable display of notice on connection.
- **Answer Mode:** Set to any key press answer or handset mode.
- **Automatic Call recording:** Set automatic call recording parameters so that your calls get recorded automatically.

10.5 Auto-record Conversations

Menu > Settings> Call Settings> Automatic call recording

When you turn this on, your calls will get automatically recorded. Preferably, you can store your recordings in your T-Flash card memory.

10.6 Network Settings

Menu > Settings> Network Settings

Depending on whether you activate SIM 1 or SIM 2 or both, you can set the following:

- **SIM 1 Network Settings:** Lets you select the network and set associated preferences for SIM 1.
- **SIM 2 Network Settings:** Lets you select the network and set associated preferences for SIM 2.

10.7 Security Settings

Menu > Settings> Security Settings

Provides you the following security options:

- **SIM 1 security setup:** Lets you set up passwords against illegal use of SIM 1.
- **SIM 2 security setup:** Lets you set up passwords against illegal use of SIM 2.
- **Phone Lock:** This function can be used to lock the phone and prevent unwanted users from using your mobile phone without permission (default code is 0000). After enabling the phone lock, you must enter the correct password each time you power on the mobile phone.
- **Privacy Protection:** Enter your Phone password (default is 0000) to set protection for contacts, messages and call logs
- **Auto keypad lock:** After this function is activated, the keypad will be locked automatically after the set time when the phone is in standby without any operation.
- **Change Password:** Change the phone password.
- **Certificate Manager:** Some internet service demands saving certificates in the phone, such as online banking. The phone may preset some certificates when leaving the factory, or you manually download updated certificates You can view and manage your certificates from here.

10.8 Restore Factory Settings

Menu > Settings> Restore Factory Settings

The phone will prompt you to input password (default is 0000). You can carry on corresponding operation after entering the correct password.

After running "Restore settings", your phone will be restored to the setting when you purchased the phone.

11 Listen to Music

The Micromax X368 comes with an inbuilt music player that plays all your favorite music stored in the phone memory or T-Flash memory card. It gives you a host of settings to make your listening experience interesting.

Menu > Music

Lists the songs or music files available in the phone or memory card. Press the **Left** or **Right** navigation keys to access the Music icon on the main screen.

Menu > Music > Left Key

In addition to features such as play mode, details of the currently active music etc, you can:

- **Set as Ringtone:** Set the current song as ring tone.
- **Send:** Send via MMS, email or bluetooth
- **Add:** Add files or songs to the list from selected directories
- **Refresh List:** Refresh the list of songs available. Perform this action when you have copied new songs to your phone or memory card via Bluetooth or Data cable.
- **Display:** Choose how your music player appears on the LCD while playing

11.1 Set Music as Ringtone

You can set your favorite music or any music of your choice as ringtone by going to:

Menu > Music > Left Key> Set as ringtone

12 User Profiles

12.1 Set User Profiles

Menu > Settings> User Profiles

Set your user profile as well as customize that profile to suite your requirement.

Your phone provides a set of default profiles including:

- General
- Silent
- Meeting
- Outdoor
- Power Save
- My Style

You can highlight any of the above profiles and press the **OK** key to activate that profile. Or, you can press the Left key to activate or customize that profile.

- You can set the parameters under different profile such as alert type, ring type, SIM1/SIM2 incoming ringtone volume, email alert, message tone and volume, keypad tone and volume, tones and system

alert.

13 Connecting to Networks and Devices

13.1 Access Network Services

Menu > Connectivity> (Your Network) Services

Allows you to access the services offered by your network provider.

13.2 WAP Services and Settings

Menu > WAP

WAP setting is required for surfing the Internet with WAP. This allows you to access the already configured internet services via home page, Bookmarks, input address, Recent Pages or perform WAP settings.

13.3 Select Profile

Menu > Connectivity> Select Profile

Lets you to select your profile as listed by your network provider.

13.4 Enable/Disable Bluetooth

Menu > Connectivity> Bluetooth

Allows you to enable/disable or configure Bluetooth.

Selecting **Menu > Connectivity> Bluetooth> Options** gives you the following options:

- **Power:** Turn Bluetooth On/Off.
- **Visibility:** Set the visibility of your device against other Bluetooth devices.
- **My Device:** Display device model when connected.
- **Inquiry Audio Devices:** Search for hands-free devices that supports Bluetooth. Pairing up with Bluetooth enabled audio devices allows you to exchange audio or video information with such devices.
- **Device Name:** Displays the name of my phone as it appears to other Bluetooth devices.
- **Advanced:** Set your Bluetooth preferences. You need to first activate Bluetooth perform advanced settings.

14 Using the PC Suite

The Micromax PC Suite allows you to transfer your phone data such as contacts, messages, and other files to the PC, or to another mobile phone.

Note: Windows 2000, Windows XP system, and Window 7 supports this tool.

14.1 Requirements

To use the phonesuite program:

1. You need to install the driver program- *usb2ser-2kXP*.
2. You need to install the Pcsuite.exe program.

Both these programs come in the PC suite CD. If your phone does not have this CD, you need to download the driver *usb2ser-2kXP* and *PCsuite.exe* program from the Micromax website.

14.2 Install the Driver


To install the driver:

1. Power on the cell phone.
2. Connect the USB cable with the phone and the PC/laptop.
3. Select the PC suite/COM port from the **Left Key** that appear.
4. Next, double-click the *Phonesuite.exe* program. The following screen appears.

User Guide




5. Click **Settings**. The following screen appears:

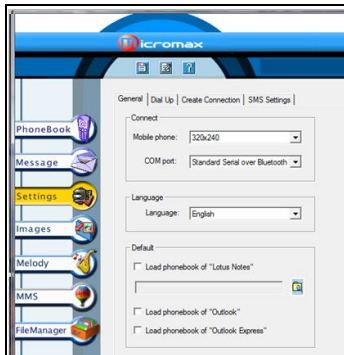

6. Set your preferences as per the mobile phone.
 - **Mobile phone** : Selected by default
 - **COM port**: Select the correct USB interface.
 - **Language** : English
 - **Memory** : Select the storage location you prefer, such as: phone or SIM (if applicable).
7. After choosing your settings, it may take several seconds to connect. Once connected, it will show

User Guide

“Connected” on the right bottom.

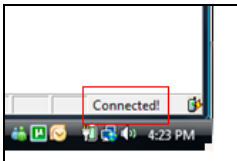

8. After connecting, you can read the function of each feature from the **Help** option (last option in Top bar).



15 Health and Safety Information



Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Certification Information (SAR)

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines developed by the independent scientific organization ICNIRP includes safety margins designed to assure the protection of all persons, regardless of age and health.
- SAR (specific absorption rate) is the unit of measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue.
- The true SAR level during phone usage will be far lower than this level.
- The SAR value of the phone may change depending on factors such as how close you are to a network base station, use of accessories and other enhancements.
- The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.690 W/kg.
- The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women

User Guide

- Prefer to use your cell phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and

chemical preparations, or any other dangerous goods are stored.

16 Taking Care of Your Device



Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

User Guide

Battery Recommendations:

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be responsible for user's safety when using unapproved batteries or accessories.

Disclaimers

- Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.
- The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the later shall govern.
- Micromax keeps the right to make modifications to any of the content in this user guide without public announcement or prior notification.

Copyrights:

- All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.

